



- 12 HELI-SHAFT
- 13 INTAKE/EXHAUST RUNNERS
- 14 AIR/FUEL INLET
- 15 EXHAUST OUTLET
- 16 SPARK PLUG
- 17 SPARK PLUG SLEEVE
- 18 PULLEY MOUNTING HUB
- 19 CLEARANCE CHANNEL
- 20 BEARING BLOCK INSERTS
- 21 BASE HEAD HALF
- 22 BEARING
- 23 TOP BEARING BLOCK INSERT
- 24 COMPRESSION SEALS
- 25 TOP HEAD HALF
- 26 SHAFT SLEEVE
- 27 INTAKE/EXHAUST PORT
- 28 IGNITION PORTS

